


LJ2 Mounting Instructions

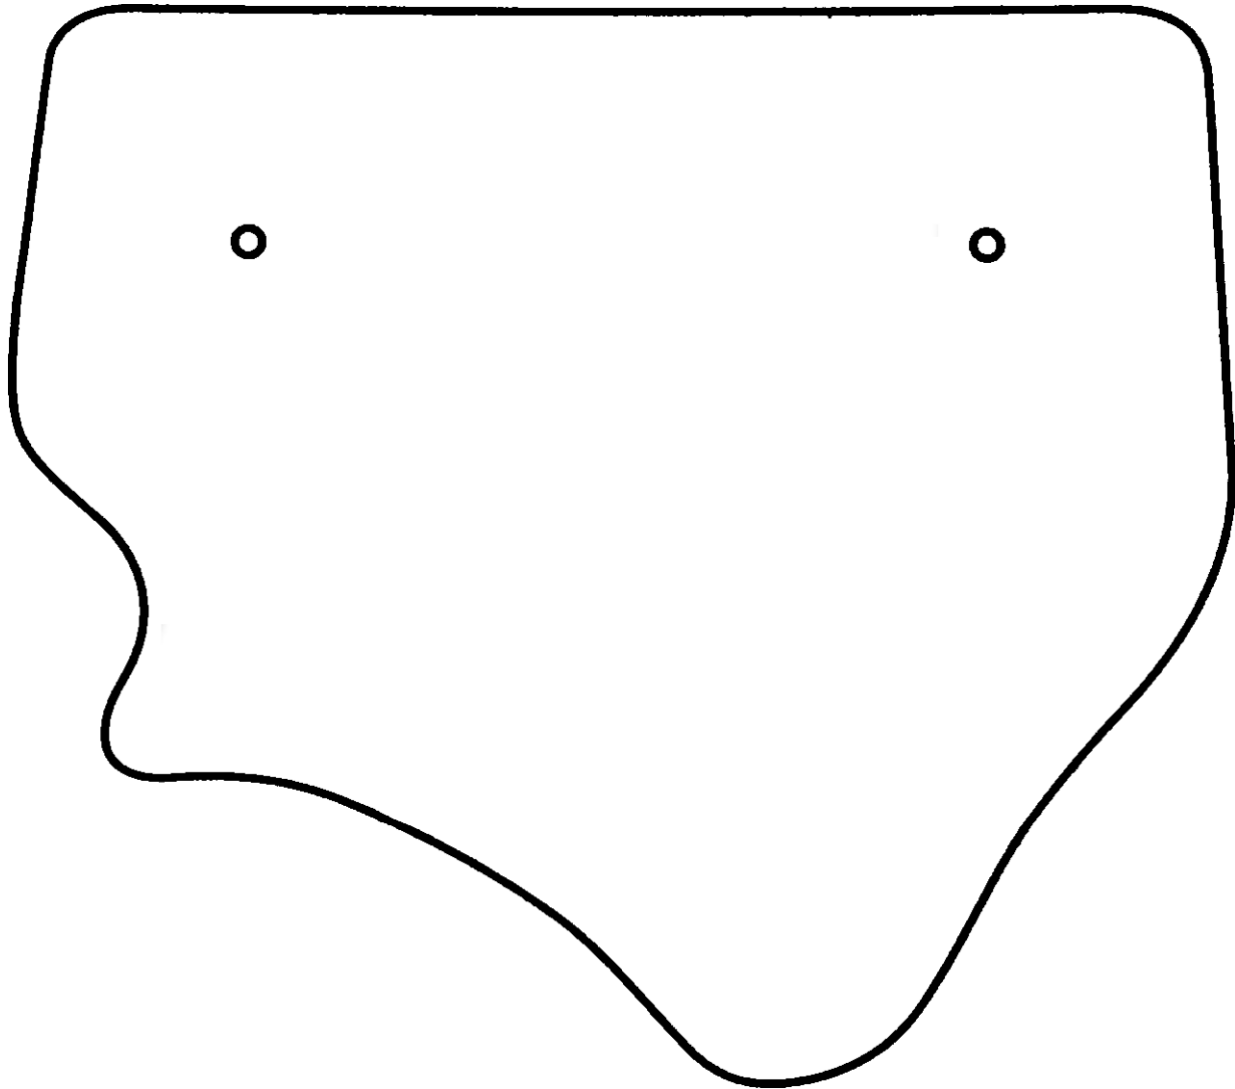

THE TEMPLATE ABOVE REPRESENTS THE INSIDE OF THE LJ2 AND SHOULD BE CUT OUT AND USED TO LOCATE THE MOUNTING HOLES.

Mounting to wall or wood surface:

1. Carefully remove the foam from the backside of the LJ2. Put aside for later re-installation.
2. Using the template above, drill two 3/8" holes through the back shell of the LJ2.
3. Hold the LJ2 in the desired position and mark the LJ2 holes on the mounting surface.
4. Drill 3/16" pilot holes approximately 1" deep into the mounting surface.
5. Use the 5/16" x 1-1/2" lag screws to mount the LJ2 by driving these into the pilot holes.
6. Re-install the adhesive-backed foam.

Mounting to metal surface (blind mount):

1. Carefully remove the foam from the backside of the LJ2. Put aside for later re-installation.
2. Using the template above, drill two 3/8" holes through the back shell of the LJ2.
3. Hold the LJ2 in the desired position, insert the self-drilling screws (1/4" x 3/4") into the drilled hole.
4. Re-install the adhesive-backed foam.

Mounting to metal surface (open mounting surface):

1. Carefully remove the foam from the backside of the LJ2. Put aside for later re-installation.
2. Using the template above, drill two 3/8" holes through the back shell of the LJ2.
3. Hold the LJ2 in the desired position and mark the LJ2 holes on the mounting surface.
4. Drill 3/8" holes through the mounting surface.
5. Insert the 5/16" x 1-1/2" bolts through the LJ2 and the 3/8" mounting surface holes. Tighten the self-locking nuts on the 5/16" bolts.
6. Re-install the adhesive-backed foam.